Please keep this handbook carefully for further reference!

# *A06 Massager Chair*
# *USER'S MANUAL*

1、Welcome to use A06 massage chair.

2、Please carefully read this instruction book before enjoying this machine.

3、For contingent use, please take this book safe.

4、While reading, please take more attention on the safety warning or important contents.

Note: the factory reserves the right on changing the design and interpretation without notice. The images in the book are for reference only, according to the real object please

# Contents


Pre-work
- Safety precaution ---------- 01
- Parts name ---------- 05

Installation
- Methods of installation ---------- 06

Usage and maintenance
- Pre-work before massage ---------- 11
- Function description ---------- 14
- Maintenance ---------- 15
- Usage of controller ---------- 17

Others
- Analysis of machine problems ---------- 23
- Specifications ---------- 24

◆Carefully read and follow this instruction book to assemble and operate
Two parts for safety precaution: warning and attention

| | |
|---|---|
| ▲ Warning | alarm for serious accident as hurt or death |
| △ Attention | alarm for hurt or damages for goods. |

Presentation from below symbols

| | | | |
|---|---|---|---|
| ⊘ | The activities which were forbidden to do | ⊘ | Self-dismount was forbidden |
| ! | Request user to follow the instructions | | The correct operating way to pull out power plug. |





## ▲ Warning

| | | |
|---|---|---|
| | ◆ Patients with serious hyherostosis。<br>◆ Swollen lump and patient of thrombosis.Patients with serious heart troubles。<br>◆ Women are pregnant or may become pregnant.<br>◆ Children or people who over drunk<br>◆ Appliance surface fever,People who insensitive to heat should pay attention. | Not recommended |
| ! | ◆ Before using this machine, please confirm there has enough space for chair reclining<br>◆ Any uncomfortable feeling from massage is suggested to consult with doctor.<br>◆ Do not offer hard massage for head 。<br>◆ Do not massage the abdominal region and knee cap. Special care while massaging neck.<br>◆ Do not allow the kids using or playing near the chair, especially at working.<br>◆ Need keeper, if the user is mobility impaired or has communication barrier. | Accident or hurt |
| | ◆ Just allow to connect the power cable of this machine on suitable socket.<br>◆ Confirm fully pushed the plug in the socket<br>◆ Plug out after massage<br>◆ Stop all the massage functions and power switch before plug the cord out | Fire or electric shock |
| | ◆ Please do not store the cushion of this machine under folded。 | Accident |
| ⊘ | ◆Do not disconnect or connect the plug to the socket with a damp hand,which may result in electrical shock or mechanical trouble.<br>◆Please make sure that power plug is completely inserted into the socket without attachingany pin or rubbish,for which may cause electrical shock,short circuit or fire. | Fire or electric shock |
| ⊘ | ◆ If this machine can not work. broken, watered or from other reasons, do not allow users to repair by themselves, please contact with the maintenance worker.<br>◆ If the plug or power cable is broken, please contact with maintenance worker to repair.<br>◆ Do not dismount any parts of this machine privately.<br>◆ Please check carefully over the cushions and coverings to confirm they are under good condition. | Dismount and maintenance |

| △ Attention | | |
|---|---|---|
| ! | ◆ Place this machine lay horizontally。 | Avoid from topple over |
| | ◆ Must have a space over 60cm from the back side of machine。 | Enough space for back part reclining. |
| | ◆ Please try soft massage and do not enjoy over 20 minutes as a new user. Do not allow for a point over 5 minutes. | Over time use will cause adverse effect |
| | ◆ Sit after confirms the massage rollers are on the right position。 | Avoid from sudden injure |
| | ◆ Make sure the power switch is off before supply power. | |
| | ◆ Before plug out he power wire, please confirm that all chair functions are stopped | If not, may occur breakage, while supply power again |
| | ◆ Make sure the plug is connected well with socket | Avoid from short circuit or fire |
| | ◆ Make sure the power wire is under good condition and there is no water or dirty things on the plug-pins。 | Avoid from electric leakage or electric shock. |
| | ◆ Make sure the ground line is connected well before suppling power | |
| ⊘ | ◆Do not press by force on the massage rollers.<br>◆Do not put your hands between the rollers while working the chair.<br>◆Do not put your hands in the working mechanical parts.<br>◆Do not put any things in the slot.<br>◆Do not stand on the chair, or put heavy things on it.<br>◆Do not move while working.<br>◆ Do not directly cut off the power or switch off while working.<br>◆Do not put your hands or head in the space of leg massager or under it.<br>◆Do not wear hard headwear while massaging.<br>◆Do not put hard things in the trouser pocket while massaging.<br>◆Do not press by force or seat on the reclined back part or leg part.<br>◆Do not massage by exposing skin or wearing little | Avoid from sudden accident |
| ⊘ | ◆Do not use this chair in over hot, damp, or corrosive environment.<br>◆Do not use electric blanket on the machine. | Avoid from damages to the machine cover |
| | ◆Do not place near the stream over, or directly expose to sunshine. | |
| | ◆Do not use it outdoors. | |





| △ Attention | | |
|---|---|---|
| ⊘ | ◆Do not place or stock this machine near particularly damp place as swimming room, bathroom and so on | Avoid from electric leakage or shock |
| ⏚ | ◆Must confirm it is under good earth connection<br>◆Do not use plug adaptor | Avoid from electric accident |
| | ◆Stop power supply, before cleaning | Avoid from sudden accident |
| | ◆Stop power supply, after massage | |
| | ◆Pull out the plug, if there has any electric problem | |
| | ◆While stop power supply, do not directly pull from the power cable. | Avoid from sudden accident |
| | ◆Separate the power plug from the socket at once, after electricity fails. | If not, may cause breakage while electrified. |

| | |
|---|---|
| ▲ Grounding Unable to connect these space | Gas pipe:may cause electrical shock,short circuit or fire.<br>Telephone lines and Lightning rod:may cause electrical shock,short circuit or fire.<br>conduit: on plastic can't have function. |

# Part Name

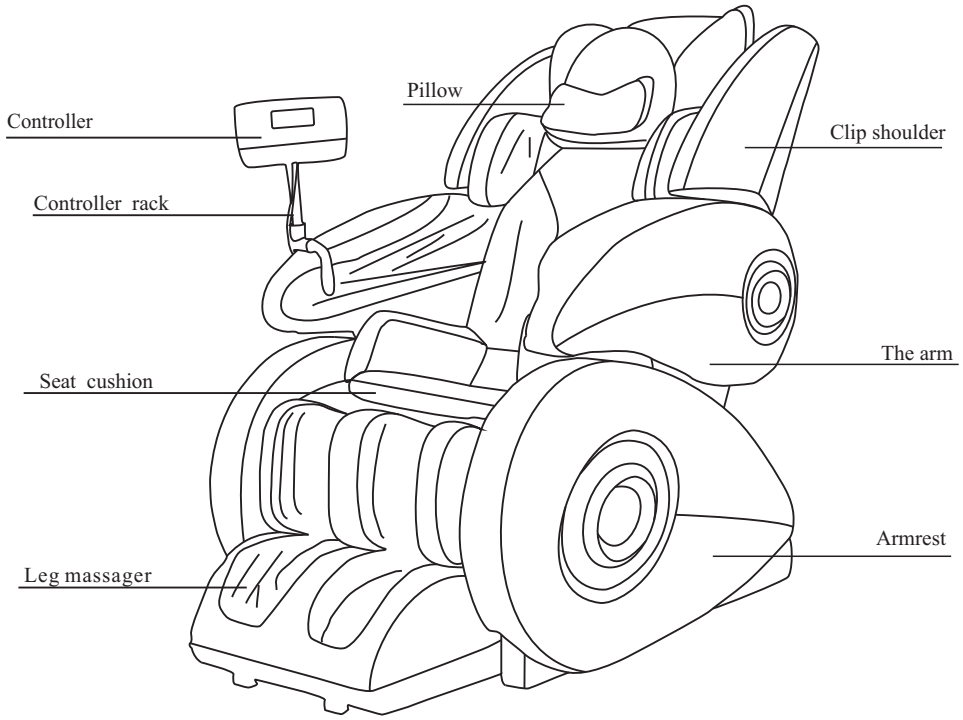


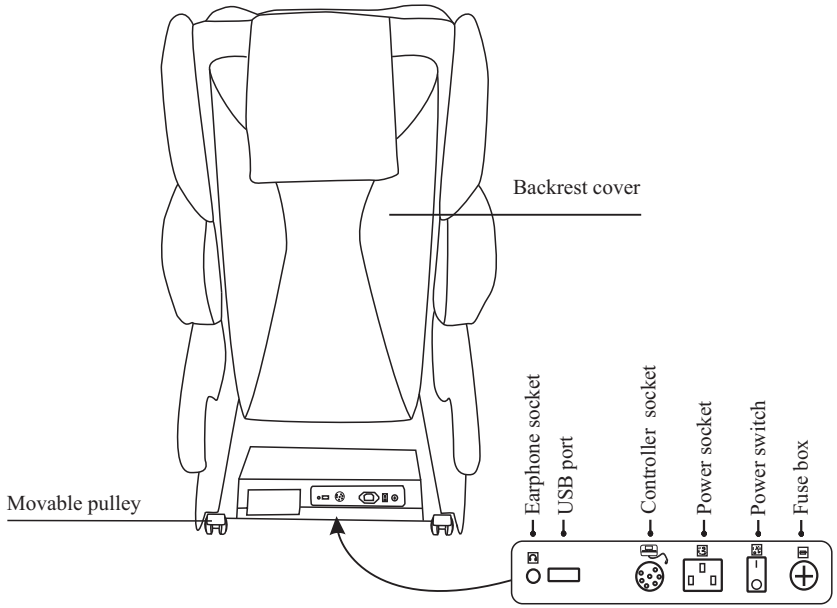






## Installation （1）

1.Take out the pillow,the arm seat cushion,controller,shoulder massager the two castor and spare parts box,Then we suggest 2 person to taking out the main body carefully avoid damaging,Take out the leg massager at last.

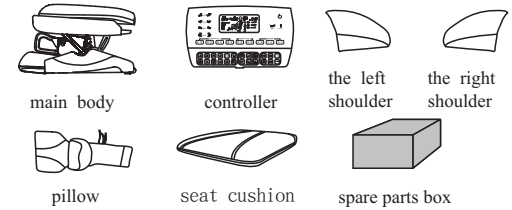


2.Open the arm massager box and take out all the parts in it carefully.

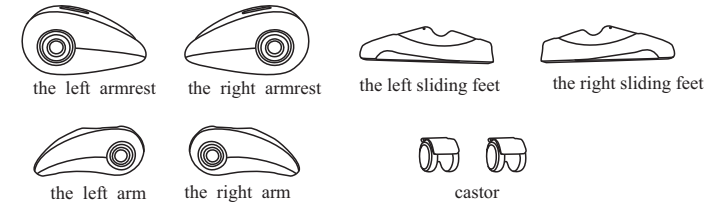


（note: in the process of installation, must according to the following sequence installation, as shown in the 6-10 pages.）

3.Install casters, foot base

1)Insert the movable pulley into the Square tubes that near to the Electrical box cover(blow figure 1).

2)Then insert the Buckle on the two sides of foot base into the position on the two sides of Seat frame, Fixed with screw coreectly(blow figure 2).

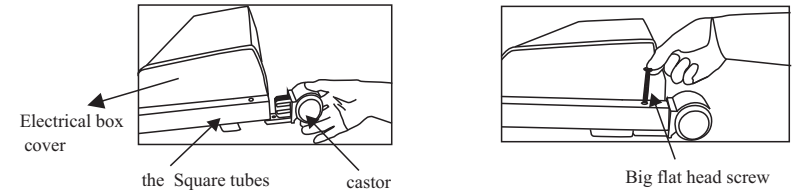


figure 1

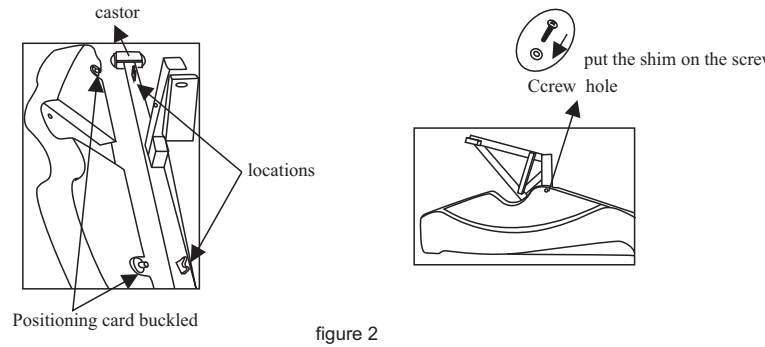


figure 2

Installation(2)

1.Firs took out the main body chair in position, then turned over the backrest(Figure 1)

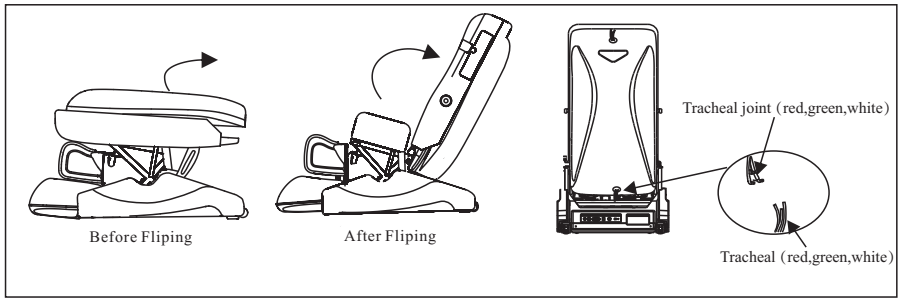


figure 3

2.Firstly take the back cushion out, and connect to the back prepare padding, and then connect the air tube. (Figure 4)

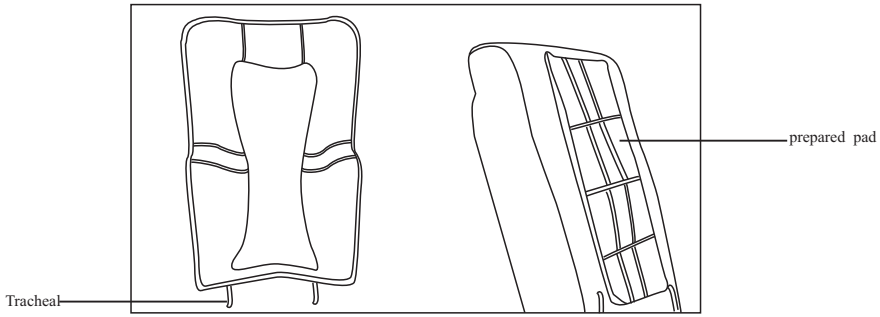


figure 4

Note: the following steps are in massage chair connected to the power source, restore to the original state by default(See page 7).

4 .Intall the armrest

1)Connect the Speaker wire which on armrest and mainbody(blow figure 3);

2)Aim the 2 pins on the armrest to the Pin hole on seat frame,while aim the fixed hole in front of the armrest to the Corresponding hole.Then fix it via the star screw (blow figure 4) 。

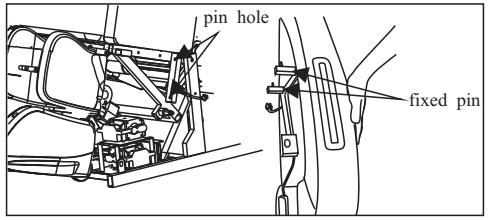


figure 5

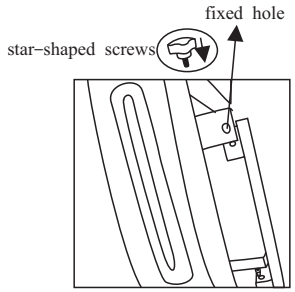


figure 6





Installation(2)

6.Install the arm massage

1)Make the fixed shaft on arm massager aim the shaft on frame then insert it slowly till heard "click";Pull the arm shoulder to make sure if it's fixed well;

2)Make sure the roller on arm massager aim the roller trough on armrest;

3)Connect the Tracheas one by one via Color;

4)Adjust the controller rack to a appropriate position is ok.

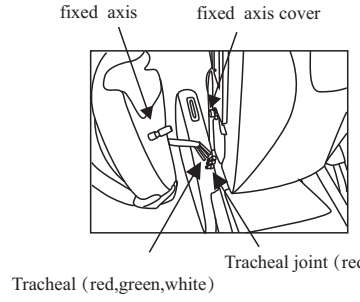


figure 7

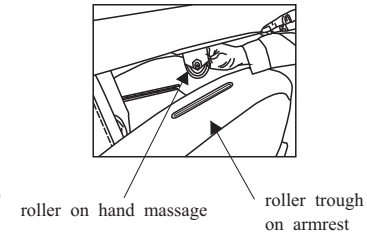


figure 8

5.Install the shoulder massager

1)First clip the shoulders of the hinge pin into the hinge Shelf frame hinge, and then clip the shoulder positioning buckle to Shelf frame hinge push (Figure 5);

2)the clip shoulder trachea and Block shelves blue logo of the trachea docking, and then the trachea cloth cover one way or another, the installation is complete.

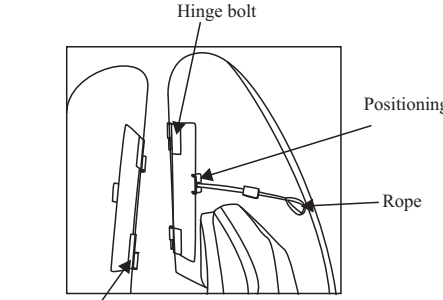


figure 9

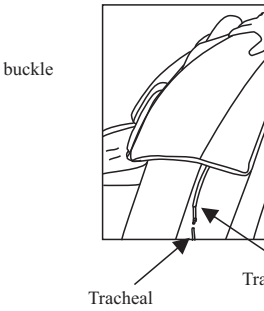


figure 10

## Installation(3)

8.Install the seat cushion

1)Take out the seat cushion,put the zipper under back cushion and seat cushion on a suitable position(blow figure 11);
2)Connect the seat cushion tracheas and heat line via color(blow figure 12).

(Notice: after tracheal connect the cushion, confirm the sit pad into the hole, lest cause plugging pressure Plug.)

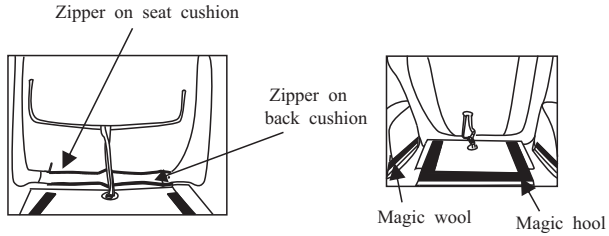


figure 11




figure 12

9.Install the Pillow

1)First the pillow mat through the back of a chair at the top of the holster buckle (figure 13);
2)Then the color of the pillow cushions trachea docking good, and will be back by heating power. finally Will the pillow mat in proper place (figure 14).

(Note: the pillow mat tracheal connection, confirm connection correct, tracheal without bending without suffocating.)

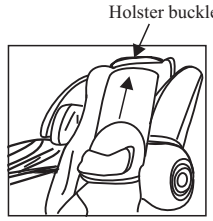


figure 13

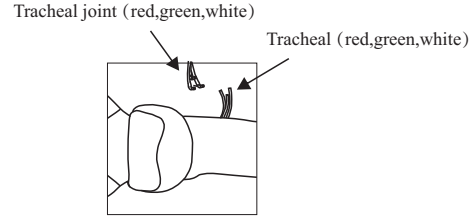


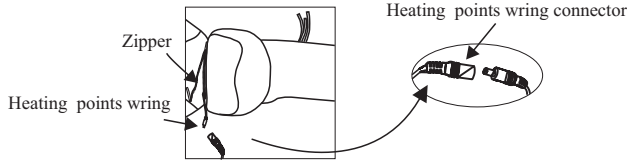


(Comments see page 14 of the AD hoc function atricle 2)

figure 14





## Installation(4)

10.Install the controller and fix the romote controller.

1)Connect the controller plug and controller jack under the backrest.

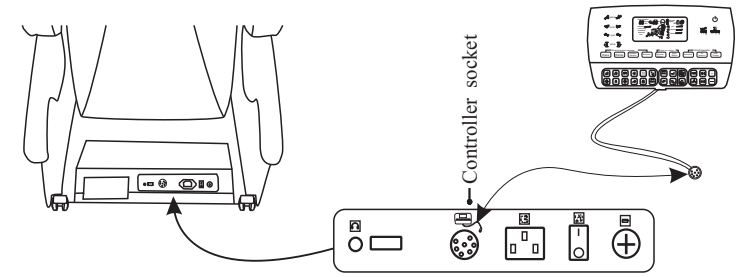


Figure 15

2)Install the controller on the controller supporter.

Insert the controller board to the controller back slot position Accurately.

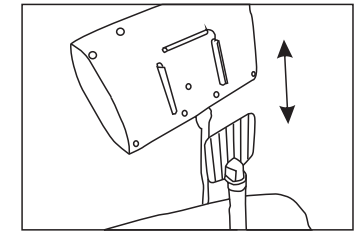

Figure 16

11.Operation after installation

Please operate as follow:
1)connecting the power cord to the power socket.
2)The other plug should be insert to the power.
3)turn on the switch.
4)enjoy the comfortable feeling through the controller.
5)insert the USB while using it.
6)insert the earphone into the earphone socket while using it.

## removal(1)

### 1.Remove the shouldrest

1)To find folder shoulder rope, and then pull out, then clip the shoulder moving out, and finally the folder Shoulder push up, two hinge separation, then separate the air tube.

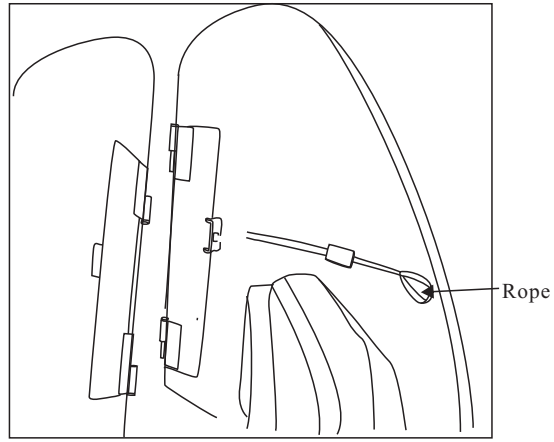


figure 17

### 2.Remove the handrest

1) Firstly pull the armrest out from the rolling route.
2) Then pull the handrest out from the shaft, and separate the air tube.

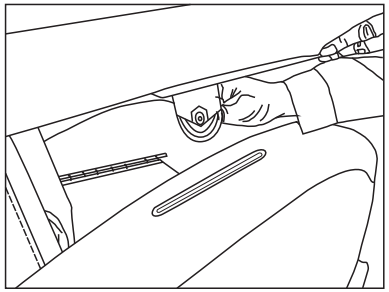

figure 18

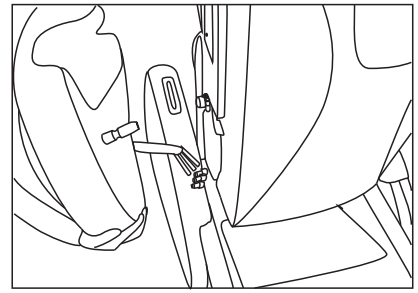

figure 19



## removal(2)

### 3.Remove the armrest

1)Firstly loose off the star screw on the armrest, lift up the handrest then pull a little bit out, finally match the armrest, separate the louder speaker line.

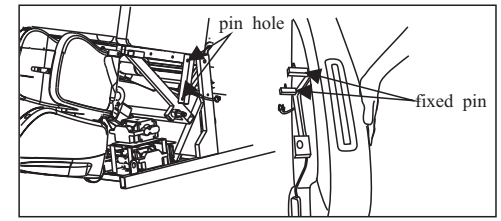


Figure 20

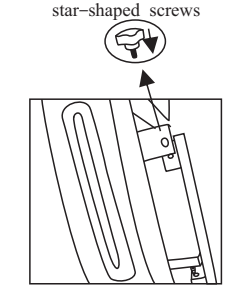


Figure 21

### 4.Remove the roller foot

1)Lift up the seat cushion, to find the air tube and connector plug from the roller foot, and take off the connector
2)Separate the wind cloth from the roller foot, take off the cotter pin,

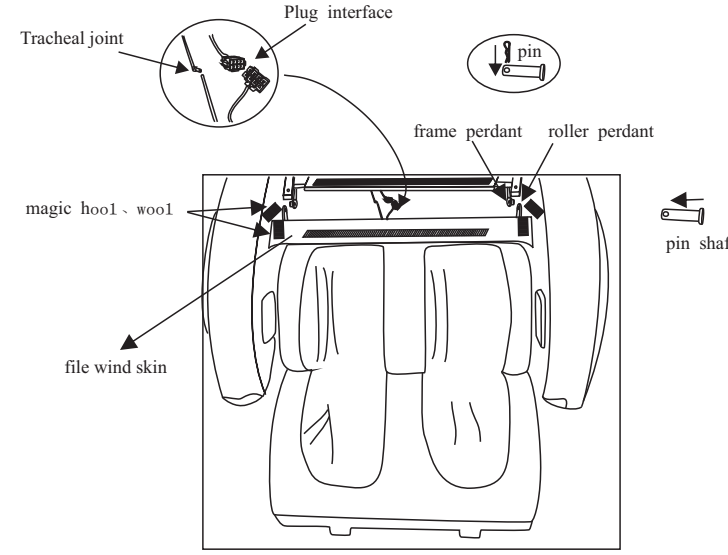


figure 22

## Placement

### ●Confirmation before sitting on the chair

Confirm that there is no people, pets or substance in the scope of backrest and leg rest movement.

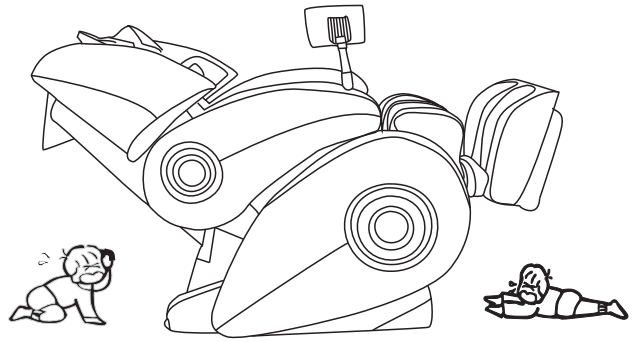

●servicing electricity

①Please clean the dirty remote controller , control box with clean cloth.
②Wet cloth forbidden,incase of electricity leaking,and parts breaking or the body accident.

## Attentions before placement

There must have enough space around the chair. There is a clearance 30cm from the front part of the chair to wall, and 40cm from chair backrest.

Attentions before using the reclining functions

①No human or substance around the chair.
②Enough space for reclining.

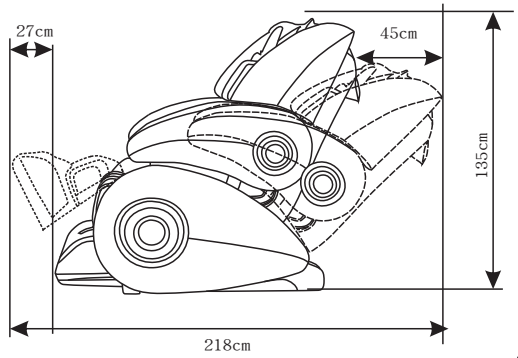






## Adjustment before massage

### Before Adjustment

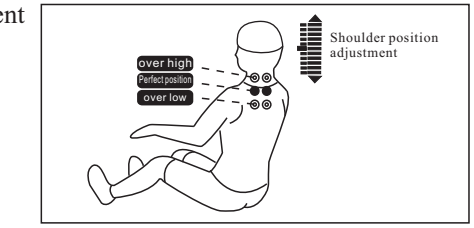


Display for shoulder position adjusting figure

Please adjust the massage hands to correct position and lie down to avoid injuring the head.

| Function | keys | description and display |
|---|---|---|
| Shoulder position Adjustment | | Adjust the massage hands upwards to get the proper position |
| | | Adjust the massage hands downwards to get the proper position |

According to the body type,can use these buttons to micro adjust the shoulder position.Display the matching operation on the controller.(As above figure shows)

Warm proposal

When you feel the massage is not hard please take away the pillow cushion and start massage. Due to the dead weight of this machine, long time heavy load will make scar to the floor. so if possible, please protect the floor by laying carpet.

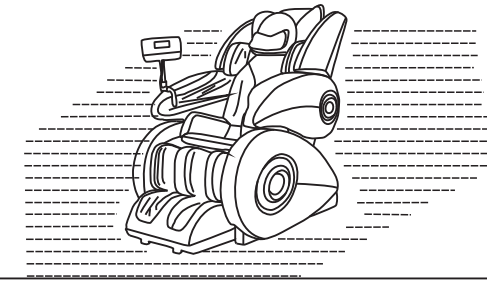

| | |
|---|---|
| ▲ Caution | ①Before Using, please raise up the pillow cushion, backrest cushion to check if there is breakage on it.For any brakage, please cut down the power and repair.<br>②Please connect the plug with the proper socket. |
| △ Notice | ⑴Before seat down, please confirm there are no things in the crack of seat, back, leg an foot parts.<br>②Before seat down, please confirm the machine have been under restored condition.<br>③While using, please do not stand on the chair. |

## Pre-work before massage

### ON/OFF the machine

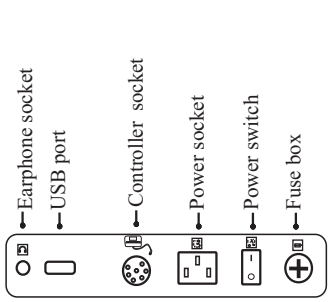


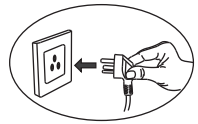

**Step 1 Power on**

① Confirm the power line is connected to the chair and power socket.

② Press on the power swich key behind the chair. The indicating lamps of the switch and power key on the controller will light up. This moment the machine is under standby mode.

③ Press on the power key on the controller to start massage.

**Step 2 Massage**

① Enjoy the massage via selecting the function keys on the controller (please carefully read the usage of controller).

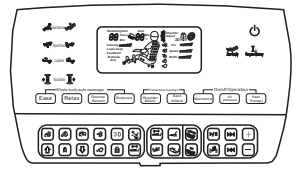

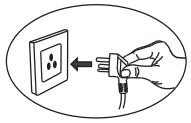

**Step 3 Shut off the power**

①Press on the power button on the controlle to switch off this machine. It will automatically restore to initial state.

②After restoration, shut off the power switch behind the chair.

③Plug out the power line from the socket

### Method of chair movement

Strapped up the wires and place on the chair seat to avoid broken from movement. Move and put down gently, if not may cause damages for inner parts. If the ground is made of wood or other easy broken material, do not move via the wheels. We suggest two or more people to lift up and move it. Do not swing from left to right or risen up the leg part from soft parts. Confirm the power wire is separated from socket and put away. (It is the best way that the backrest is folded . If not bad movement will cause broken for backrest)

**Attention**

Do not move this machine while using.

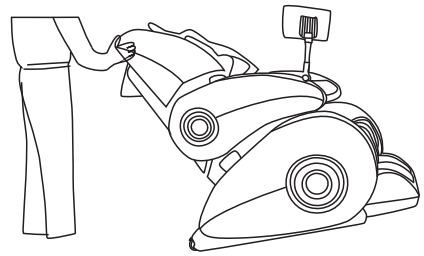



## Function description

### Function Introduction

● Ascending and descending function of calf rest and back rest and sync movement function of armrest.

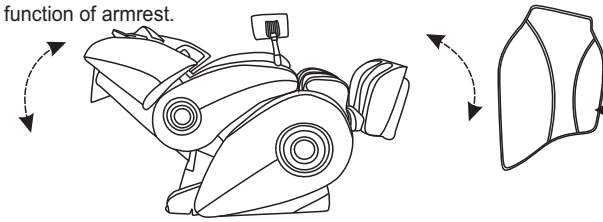


### Special function

- Ajust the back,seat,calf angle to maintain comfortable status as relaxing in space capsule;
- Pull the zipper on the position on head cushion,It can be used for heating as your demand.
- Calf extention: the length of calf rest can be adjusted as your demand and it can reached 24cm to make sure enjoy the comfortable massage ;
- Head cushion: Humanized design head cushion can be adjusted 20cm to autonomic regulation in order to meet the needs of people with different heights to enjoy the professional head massage that belongs to you ;
- Air pressure massage for foot: 40 airbags with different type use the professional program with Pressing, pause, relax, pulse interactive and so on to let you enjoy the perfect massage ;
- Sync air pressure massage between calfrest and seat rest to activate the bone regeneration, relieve muscle tension and stiffness of the joint, built a healthy body for you ;
- Thai Foot scrapping massage: because of so many acupuncture points, he roller foot provide a scrapping massage like a masseur.Both the lighter or strong massage can offer you the comfortable massage which never happened.Your cold and pained feeling prove the energy just absorbed by you and new supersedes the old is promoted;
- The carbon fiber far-infrared heating:40℃-50℃ heating for Backrest and seat cushion to relieve your feeling of cold and pain.The elements it emit is suitable to humanbody and easily absorbed by cells to promote metabolism ; {Notice:Pull the zipper of headrest cushion zipper and remove the cushions then you can massage any parts that you want. (figure). }
- Airbags massage for arms: Your arms and hands will enjoy a relax and perfect trip through the 30 pcs airbags professional massage for the acupuncture points ;
- Massage for waist: Adjust the spine position, effective relief waist muscle stiffness by the 4 airbags' inflation and deflation ;
- Hip twist function: swing seat cushion massage with 18 airbags like " 8" make your body to achieve balance and build a lightweight body.
- Massage for neck: the 11 airbags can massage for neck and shoulder .Not only help you relax the muscles, promote the neck And brain blood circulation but also provide sufficient oxygen for cells in head allowing you to always keep a clear mind.

## Instruction for earth connection

This product belongs to electrical apparatus. Before using this machine, please make sure it was grounded. If not may cause electric shock. If the plug is with three pins, can directly use this machine. If the power plug is with two pins, please carefully operate as below.
If the power socket has a grounding terminal, please use the ground wire to connect grounding terminal of machine and power socket.
If the socket do not have grounding terminal, please contact with the product supplier and electrical engineers.
The following places are forbidden to be connected with earth wire:
1).Telephone wire and lightning rod, to avid thunder risk;
2).If any section of the water pipe is plastic, grounding will be disabled.
`3)Gas pipe prone to the risk of bombing and burning

## Replace the fuse wire

If the fuse wire is burned up, please switch off the chair and separate from power socket at first. Then using the screw driver to open fuse box and replace it by new fuse with same specifications. Finally screw up the power box to finish. Please operate with your electrician.

## cleaning and servicing of massage chair

◆Before maintenance, pull off the power plug from the socket, otherwise electrical shock and injuries may happen.
◆Clean the cloth surface with neutral detergent or special detergent for clothes.
the dirt on the back cushion, hand rest cushion and leg position shall be cleaned with a piece of cloth dampened with neutral detergent and air dried.
◆Cleaner can be used on the plastics , pipe or leather of the massage chair ,and wipe with a piece of cloth carefully.
◆Do not clean this device with cleaners containing organic solvent ,like gas online thinner and toluene , which may cause discoloring aging and cracking of leather
◆Do not spray any pesticide which may result in electrical shock or fire.

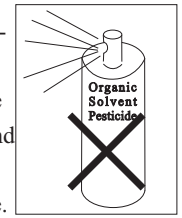






## servicing electricity

Please clean the dirty remote controller, control box with clean cloth
Wet cloth is forbidden , in case of electricity leaking, and parts breaking or the body accident

## Methods for storage

◆Do not dismount the back of the chair.
◆The massage chair should be clean without any dust on it.
◆Please keep the massage chair on dry ground
◆Please cover the chair with dust-free cloth to prevent from dust when it is not used for a long time.
◆Do not put the massage chair in too hot place or be exposed to direct sunlight.High temperature may shorten the life of electrical appliance and distort plastic parts.
◆Do not store in any over-cold place. otherwise, when temperature of massage chair ries, moisture may be formed inside,which may damage inner parts.

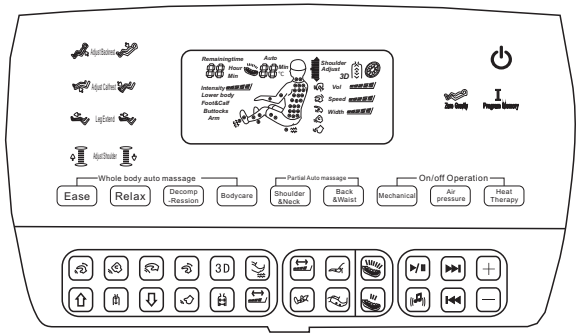


Power on, and operate the mains switch of massage chair to "I" position. The massage chair is located in reset state (make sure the backrest is in the highest position and the footrest is in the lowest position). At this juncture, the chair will enter the stand by state. Only backrest, calf rest and elevation adjustment functions are available for this holding state.

1. Startup the chair massaging function/Stop

While the chair is on reset condition, press on this button. The controller screen will twinkle and the backrest and calf rest will recline to a comfortable angle. Then users can put any buttons to enjoy timed massage. Press the ON/OFF button again to turn off. The massage chair will stopped massaging while the time is up and restore to resetting condition via put ON/OFF button again.

2. Zero gravity

Press this button to start zero gravity function .Place humanbody in the least stressful position to relax fatigue and relaxse pressure.Making the mainpulator and airbags do full body massage.

3. Program Memory

Please select the favorite massage functions, backrest angle, calf rest angle, speed and then press the memory function button over six minutes since when the keypad tone rings.It will memorize the functions on that button and enjoy this memory massage any timevia pressing this button. This is custom selection buttons for your favorite.Users can rechange the recorded functions via same operation as above.





5. Adjust Backrest

You can adjust the angle of backrest to enjoy the perfect massage.

6. Adjust Calfrest

You can adjust the angle of calfrest to enjoy the perfect massage.

7. Leg Extend

You can the lengh of leg according to body height to enjoy the perfect massage.

8. Adjust Shoulder

Please press this button to adjust the shoulder according to the different heightand position for massage hand.




1.Ease

Auto Mode

Offer step-by-step massage for upper body, with in-depth treatment for eight acupuncture points. Meanwhile, all other functions will be extended to restore body strength. The timing is 15 minutes. All the background lamps of corresponding keys will be lightened.

2.Activate

Auto Mode

16 functions of prescription massage. It appoints 16 major massage points for upper body and extends fixed point in-depth massage for selected massage points. Therefore, the massage effect will be more delicate and accurate, relaxing muscle sourness and pain and stimulating acupuncture points along both sides of spine. The timing is 15 minutes. All the back ground lamps of corresponding keys will be lightened.

3.Decompression

Auto Mode

Massage for whole upper body and activating all other functions (except heating function),relax the bones and muscles.

4.Body Care

Auto Massage

Offer overall and repeated massage for upper body. Meanwhile, all other functions will be extended to relax shoulder, back and waist. The timing is 15 minutes. All the background lamps of corresponding keys will be lightened.

1.Shoulder＆Neck

Press this button to make massage for neck and shoulder part. Simultaneously, the background lamp of this button will be lightened.

2.Back＆Waist

Press this button to make massage for the small of the back, simultaneously, the background lamp of this button will be lightened.

1.Mechanic

Press the button to stop all the working functions for upper body, and press it again to start up the Mechanic functions.

2.Airbag

Press the button to stop all the massage functions for lower body, and press it again to start up the Airbag functions.

3.Heater

Press this button to startup the heating function for backrest .The backrest temperature keeps to 70 C° .

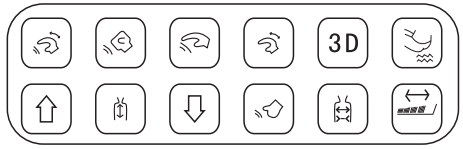


1. Kneading

Manual Massage Function

There are five steps for width adjustment and 6 steps for speed.

Press this button to select the kneading massage for point position of back in medium intensity. Then press the button 3D to offer 3D point kneading massage for back, press button 3D again to get up/down kneading massage for back, press the third time to

2.Knocking

Manual Massage function

There are five steps for width adjustment and 6 steps for speed.

Press this button to select the knocking massage for point position of back in medium intensity.





Then press the button 3D to offer 3D point knocking massage for back, press button 3D again to get up/down knocking massage for back, press the third time to offer up/ down 3D knock and the fourth time to repeat knocking massage for point position of back. The functions are circularly adjusted via pressing 3D button.

3.Tapping

Manual Massage function

There are five steps adjustment for width and 6 steps for speed.

Press this button to select the tapping massage for point position of back in medium intensity. Then press the button 3D to offer 3D point tapping massage for back, press button 3D again to get up/down massage for back, press the third time to offer up/ down 3D tapping massage for back and the fourth time to repeat the tappingmassage for point position of back. The functions are circularly adjusted via pressing 3D button.

4.Pummed

Manual Massage Function

There are five steps for width adjustment and 6 steps for speed.

Press this button to select the manipulation massage for point position of back in medium intensity. Then press the button 3D to offer 3D point manipulation massage for back, press button 3D again to get up/down manipulation massage for back, press the third time to offer up/ down 3D manipulation for back and the fourth time to make manipulation massage for point position of back. The functions are circularly adjusted via pressing 3D button.

5.3D

Manual Massage Function

This button is used for offering several dynamic massage skills for the auto massage functions(tapping, knocking,pummeling,rolling,shiatsu and kneading),according to lineament of human back bone.The massage skills will be circularly adjusted via pressing this button.

6.Swing Adjusement

Press this button to startup and shutdown the swing function for hips and the default state is working,press it will turn off .

7.Rolling

Press this button to select the rolling massage for back . Then press the button 3D to offer 3D up/down rolling for back,press button 3D again to get up/down rolling massage,press the third time to offer up/down 3D rolling massage and the fourth time to make up/down rolling massage for back.The width is adjustable and the massage will be vircularly adjusted via pressing 3D button.

8.UP-AND-DOWN Adjustment

Under manual mode, press these buttons to adjust the mechanism hands at random to the perfect massage position.

9.Shiatsu

Manual Massage Function

There are five steps for width adjustment and 6 steps for speed.

Press this button to select the shiatsu massage for point position of back in medium Intensity. Then press the button 3D to offer 3D point shiatsu massage for back, press

button 3D again to get up/down shiatsu massage for back, press the third time to offer up/ down 3D shiatsu for back and the fourth time to make shiatsu massage for point position of back. The functions are circularly adjusted via pressing 3D button.

10. Width Adjustment
Width adjustment is available for tapping, knocking, rolling and shiatsu massage modes. Circularly adjust the width via pressing this button.

11. Speed Adjustment
Speed adjustment is available for manual massage modes. Circularly adjust the speed via pressing this button.

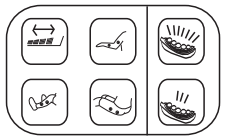

1. Intensity Adjustment
There are three steps of intensity adjustment for air pressure massage. Circularly adjust the intensity via pressing this button.

2. Arm Massage
Press this button to select airbag massage for arm and stop via pressing this button again.

3. Leg Massage
Press this button to operate the air pressure massage for seat position. There are three steps intensity for cyclic adjustment.

4. Buttook
Press this button to operate the air pressure massage for seat position. There are three steps intensity for cyclic adjustment.

5. Heater
Press this button open heat treatment temperature adjustment. 40℃ temperature adjustment range 70℃ .

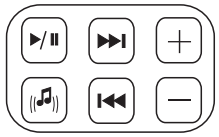

1. ON/OFF
Press this button to select the music function and close via pressing it again.

2. Synchronous Function
Press this button to select the music synchronous massage. This function will unite the music frequency with the massage actions.





3. Option Keys for songs
While playing the music, press these buttons to select the previous or next song.

4. Sound Volume Adjusting Keys
While playing the music, press these buttons to increase and decrease the music sound volume.

## Use the music function of MP3

Massage chair equip with sound box at the same time,in order to select your favorite mode to listen to music.Please insert U-tray which has music documents of Mp3 format into USB plug at the back of electrical box of massage chair;Turn on power, then you can adjust music through remote con-troller.Please use original earphone or sound box to listen to music..

## Common phenomenon

| Phenomenon | Possible cause | Processing method |
|---|---|---|
| Can not work after supplied power | Do not open the power switch | Switch on |
| | Have not choose massage function | Press on massage function |
| | Bad connect between plug and socket | Connect again |
| | Have broken on power wire or plug | Please request the manufacturer or service man to replace new power line. |
| | The fuse burned up | Replace it by a fuse with same specifications |
| | A fault in the controlling circuit | Contact with the mainten-ance department of supplier |
| Working with tap-tap-tap or hum sounds | Sounds from air pump, motor or other mechanical parts | Normal phenomenon |
| Different hight for the massage rollers | Rollers under alternately work | Normal phenomenon |
| Abnormal sounds suddenly occurred while working | If after long time works | Cut down the power and check after 30 minutes |
| | Cause from long time work | Contact with the maintenance worker |
| Suddenly stopped working | If there is bad power connection | Supply power again |
| | Auto programmed time is up | Cut down the power and use after 30 minutes |
| Can not recline | Obstructer there; work overloaded automatically stopped work for protecting machine | To move the obstructer; stop work and use after 30 minutes |
| Can not restore after reclined | Problem on electromotion pole or plug-ins under bad connection | Contact with the maintenance worker |
| Control panel overheat seriously | Cause from long time work | Cut down the power and call the maintenance worker |
| Abnormal overheat from power wire and plug | Work overloadingly | Cut down the power and use after 30 minutes |
| | Causes from other reasons | Cut down the power and call the maintenance worker |

| △ Attention | If problems all are not from above reasons, please stop power supply and contact with the distributor or factory for maintenance. |
|---|---|

# Specifications

| Performance parameter \ Model | A06 |
|---|---|
| Massage Stroke Length(inch) | 32 |
| Rollers Space Between(inch) | 1.5-7 |
| Tap（cpm） | 200-600 |
| Pummel（cpm） | 100-450 |
| Knead&Tap（cpm） | 10-90 |
| Shiatsu（cpm） | 180 |
| Knead（cpm） | 25-100 |
| Calfrest Recline Angle(° ) | 0-100 |
| Backrest Recline Angle(° ) | 120-180 |
| Seat cushion Recline Angle(° ) | 106-130 |
| Calfrest Stretch Length(cm) | 0-25 |

| Technical Spec. \ Model | A06 |
|---|---|
| Dimension of main body.(cm) | L132*W62* H84 |
| Dimension of armrest body.(cm) | L79*W63*H107 |
| Net weight of main body.(kgs) | 117 |
| Gross weight of main body.(kgs) | 130 |
| Net weight of armrest body .(kgs) | 32 |
| Gross weight of armrest body .(kgs) | 45 |

| Specifications \ Model | A06 |
|---|---|
| Rated Voltage | AC100-120V AC200-240V |
| Rated Frequency | 50/60Hz |
| Power Consumption | 200-220W |
| Safety Standards | Type I |